



Marketed By :
CHOPRA UDYOG PRIVATE LIMITED

Reg. Office
 Chopra Tower, Rajarhat, Kolkata - 700135

CUSTOMER CARE
 Email - artonindia22@gmail.com
 Contact : +91 62899 58601



Arton™
an Italian art



ARE AFFORDABLE

SANITARYWARE
 COLLECTION

PRODUCT CATALOGUE - 2023 - 24



Arton
SINCE 1971

**LUX
URIES**

are affordable

Email - artonindia22@gmail.com

SANITARYWARE COLLECTION

Arton
SINCE 1971

INDEX

01. ONE PIECE COMMODE
08. WALL HUNG COMMODE

15. BACK TO WALL COMMODE
19. ONE PCS FULL BASIN

20. ONE PCS HALF BASIN
21. TABLE TOP BASIN

31. FULL PEDESTAL BASIN
33. WALL MOUNTED BASIN

37. URINAL
38. EWC COMMODE

39. DESIGNER COLLECTION
47. FLUSH TANKE

Email - artonindia22@gmail.com



MARIUS

Top To Wall Distance: 180 mm
750 x 600 x 345 mm
WPF - 32000



AGOSTA

Top To Wall Distance: 180 mm
750 x 600 x 335 mm
WPF - 32500



Arton

ONE
PIECE COMMODE

CAMILIA

18" Trap Wall Distance - 180 mm
735 x 345 x 475 mm
MSRP - \$5500/-



05

Arton

ONE
PIECE COMMODE

KONAD

18" Trap Wall Distance - 180 mm
735 x 345 x 475 mm
MSRP - \$5500/-




06

Arton

ONE
PIECE COMMODE

CARMON

57" Top Wall Distance: 225 mm
70" Top Wall Distance: 180 mm
710 x 645 x 390 mm
MSRP: \$3500/-

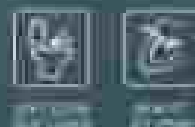

Arton

ONE
PIECE COMMODE

SKYLAR

57" Top Wall Distance: 225 mm
740 x 650 x 385 mm
MSRP: \$1800/-







MEDOX

520 x 370 x 345 mm
MRP : 9200/-



—

MARSHLA

530 x 380 x 380 mm
MRP : 8700/-



WATER SAVING

7 YEAR WARRANTY



—



STIENS

525 x 345 x 345 mm
MRP : 8000/-



WATER SAVING

—

ROMAN

505 x 345 x 350 mm
MRP : 8700/-



WATER SAVING

7 YEAR WARRANTY

STAINLESS STEEL



—

POLAR

525 x 370 x 385 (mm)
680P - 0200V



ORAN

525 x 365 x 370 (mm)
680P - 0200V







ANAN

5" Trap Wall Distance: 100mm
 7" Trap Wall Distance: 180mm
 240 x 420 x 375 mm
 MAP: 5700/-



OFF TOILET
 MAP 5700/-



ON WALL
 MAP 5700/-



WELZIN

5" Trap Wall Distance: 100mm
 7" Trap Wall Distance: 180mm
 245 x 410 x 345 mm
 MAP: 7900/-



ON WALL
 MAP 7900/-



HEXEL

5" Trap Wall Distance: 100mm
 7" Trap Wall Distance: 180mm
 325 x 400 x 355 mm
 MAP: 10000/-



ON WALL
 MAP 10000/-



BENIG

535 x 435 x 885 mm
MPP : 2400/-



BOLSA

480 x 430 x 835 mm
MPP : 1600/-



NICOLAS

885 x 395 x 390 mm
MPP : 3100/-



ETIKAN

400 x 425 x 345 mm
MPP : 1800/-







LINE

410 x 345 x 185 mm
MRP : 2450/-



GARNEL

480 x 360 x 130 mm
MRP : 4100/-



mm



LUBEK

540 x 355 x 170 mm
MRP : 3400/-



FECH

390 x 390 x 140 mm
MRP : 4000/-



DOVER

600 x 400 x 145 mm
MRP : 4500/-



COLMA

525 x 335 x 140 mm
MRP : 3050/-



AKIRA

420 x 430 x 125 mm
MRP : 4200/-





DEVON

450 x 385 x 125 mm
MRP : 4500/-



TEPIS

630 x 290 x 145 mm
MRP : 4000/-



TED

430 x 430 x 140 mm
MRP : 3050/-



FLAKE

425 x 415 x 135 mm
MRP : 4000/-



CRYA

720 x 325 x 130 mm
MRP : 1200/-



MARKEL

100 x 380 x 135 mm
MRP : 2500/-



ELVINO / OLIN

BWG 4011 + BPD 6003
450 x 455 x 940 mm
MRP : 4400/-



WALTER / OLIN

BWG 4006 + BPD 6003
312 x 420 x 940 mm
MRP : 4400/-



ELDORA / TORIN

BWG 4012 + BPD 6001
620 x 585 x 985 mm
MRP : 5300/-



ARMIS

330 x 355 x 135 mm
MHP : 1650/-



AVENA

345 x 345 x 135 mm
MHP : 1950/-



WALTER

515 x 430 x 210 mm
MHP : 2650/-



OTIS

355 x 385 x 130 mm
MRP : 1500/-



ELVINO

405 x 485 x 135 mm
MRP : 2850/-



KILI

360 x 300 x 145 mm
MRP : 1500/-



PERLI

438 x 285 x 140 mm
MRP : 1450/-





FEM

540 x 350 x 290 mm
MMP : 4000/-



ICOMAN

635 x 330 x 320 mm
S-SENSOR URINAL (NOT INCLUDED)
MMP : 5200/-



EWG - S

445 x 415 x 250 mm
MMP : 2000/-
SEAT COVER MMP : 500/-



EWG - P

445 x 350 x 415 mm
MMP : 2000/-
SEAT COVER MMP : 500/-





STONEX

480 x 355 x 355 mm
MRP : 18500/-



STENA

455 x 315 x 140 mm
MRP : 8600/-



STENLY

380 x 180 x 835 mm
MRP : 31000/-



MILANO

480 x 355 x 355 mm
MRP : 18500/-



MONTE

455 x 335 x 140 mm
MRP : 9600/-



MIRICK

380 x 180 x 835 mm
MRP : 38000/-



TORON

480 x 355 x 355 mm
MRP : 18500/-



TERRA

480 x 170 x 125 mm
MRP : 7500/-



TWIST

385 x 165 x 850 mm
MRP : 19500/-



GEO

480 x 355 x 355 mm
MRP : 18500/-



GEOU

480 x 370 x 125 mm
MRP : 6000/-



GEONA

380 x 180 x 835 mm
MRP : 17500/-



**FLUSH TANK
SLIM SIDE HANDLE**

MPN : 121007

-  Strong Body
-  Perfect Fitting
-  Stylish Side Handle

**FLUSH TANK
ULTRA SLIM SINGLE (DUAL COLOR)**

MPN : 110007

-  Strong Body
-  Perfect Fitting
-  Stylish Single Flush



WALL HUNG BASIN

1. The top surface must be fastened into the wall using cement/concrete. An opening or gap should be between the product and the wall. The hole must be fast perpendicular to the wall. Allow cement/concrete to set. Check if the flange and handle back to the main body in the fasten hole & install.
2. If necessary use, plaster (or) or minimum plaster of paris (thickness of 10mm) to fill.
3. If small holes are observed in wall, use patch plaster and mesh mesh.
4. While being water proof, ensure that the water-proof is placed on the wall under the basin.



COUNTER WALL BASIN

1. At the beginning
2. A skilled or experienced person should install the basin.
3. Avoid using adhesive with the product.
4. Check the water supply and waste facing if required.
5. Do not cover the basin face (it protects against water and ready for installation).
6. Please follow all local building and plumbing codes.



MATERIAL & TOOLS

Measuring tape, level, spirit level, saw, hammer, screws, nails or metal fasteners (if required), drill (1/2 inch, 3/8 inch or larger), pencil, marker, spirit level or string.


INSTALLATION OF LAVATORY

- Please note: Please install in a way that future removal from underneath the counter top is possible without damaging the counter top.
1. Please check the correct location for connection between the basin, drain, faucet and cabinet.
 2. Please cut the hole.
 3. Please carefully mark the template on the counter top as directed.
 4. Please mark the final hole carefully on the counter top.
 5. Please drill 1/2 inch hole on the inside of the cut line.



For Wood Counter tops:

1. Mark and cut out the wood to the hole of the location shown on the template.
2. Wipe down any exposed areas of wood.

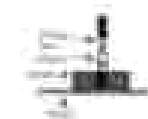

For Marble Counter tops:

1. Position the circular top upside down on floor, according to perfect the surface. Mark and drill 1/2 inch hole (depth of the location shown on the template).
2. Use a drilling tool (any) to secure the stone.





For All Installations:

1. If the counter top has not been finished, finish it at this time.
2. Cut the faucet hole according to the faucet manufacturer's instructions.
3. Install the faucet to the counter top according to the manufacturer's instructions.
4. Install the drain to the counter according to the manufacturer's instructions.

INSTALLATION DETAILS OF WALL HUNG

CONCEALED INSTALLING

1. If the wall is going to be plastered for a thickness of 12 mm and a thickness of 5.7 mm, the plaster for the body from the finished wall should be 10 mm thick.
2. If the thickness of plastering and the wall is less than the dimensions mentioned above, the plaster should be applied along with the bracket (should be fixed into the wall by using a suitable spacer between the top flange and the bracket frame).
3. The bracket should be secured into the floor at the height from the center line of the hole to the bottom of the bracket flange is 100 mm.

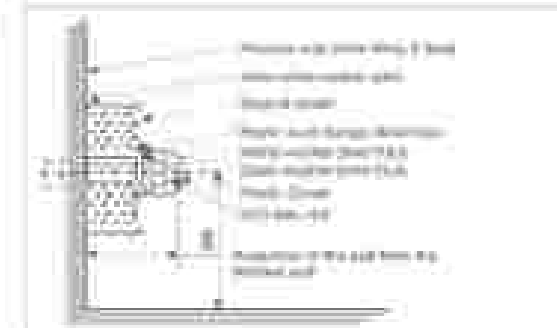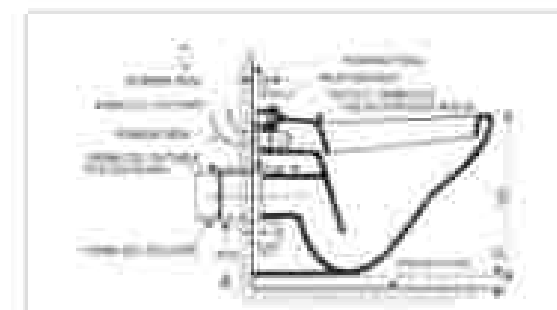

MAINTENANCE

Like any other part of your house, the bathroom can be made better and last longer if it is taken care of regularly. To make your bathroom beautiful make use of some maintenance tips.

Wash Basin

A mild detergent can be used to wash the basin at least once a day. After washing, the basin should be wiped out clearly to avoid water stains.

Cleaners

Cleaner the basin can be used to clean the basin with soft plastic brush or soft sponge cloth. To avoid scratch, avoid using abrasive cleaning materials. If it is used over with the stiff brush.

Keep the toilet basin healthy by a consistent clean routine. If some hard and dirty, if there has been some hard water stain or long time of time, water mineral and disinfectant can be used on the surface of areas that get wet. In such cases, these substances can be removed with the help of a solution of dilute hydrochloric acid. Clean with a soft cotton cloth and warm water with soap. Do not use thinner. We recommend using a special glass and crystal cleaner or special liquid to work. Use brush or use rubbing compound and then polish with a cloth to restore the smoothness.